

Building the Mostro's DFC Head



RigidCore Dampener



Install the inner O-Ring



Install teh outer O-Ring



Insert the RigidCore Dampeners inside the Yoke with the round edge facing into the yoke.



Use the spindle as a helping tool. You can use grease n this step too.



Insert the Spindle in place



Correct way to set Thrust bearing diameters.



Use a M3x14 and a M3x10 to install the DFC pitch arms.



Install the arms.



Use a drill to insert the threaded rod into the thick Ball Link




Install the Ball link into the DFC rod.





Install the M3x8 round head screw using an M3 washer.

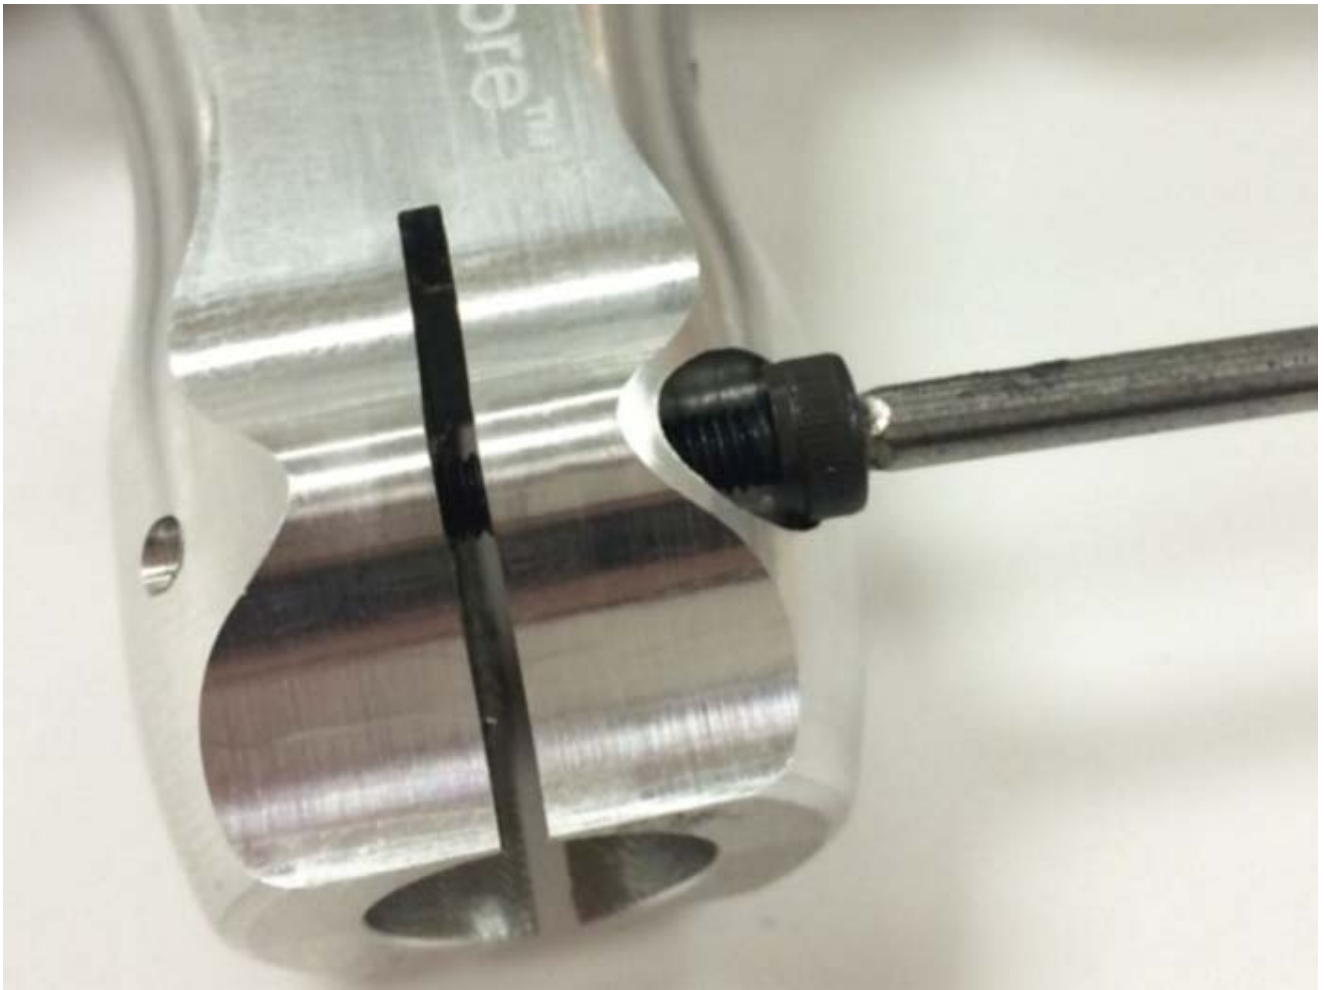

Insert the M3x12 screws into the clamp bolt holes.





Install the bolt into the grip until you get to install the main blades.